


VORTAC PER	APP CRS	Rwy Idg
113.2	189°	5103
Chan 79		TDZE 994
		Apt Elev 1003

VOR RWY 17
PERRY MUNI (F22)

Obtain local altimeter setting on CTAF; when not received, use Ponca City altimeter setting. DME required.

MISSED APPROACH: Climb to 2000 then climbing left turn to 3000 direct PER VORTAC and hold.

KANSAS CITY CENTER 127.8 319.1	UNICOM 122.8 (CTAF) 0
-----------------------------------	--------------------------

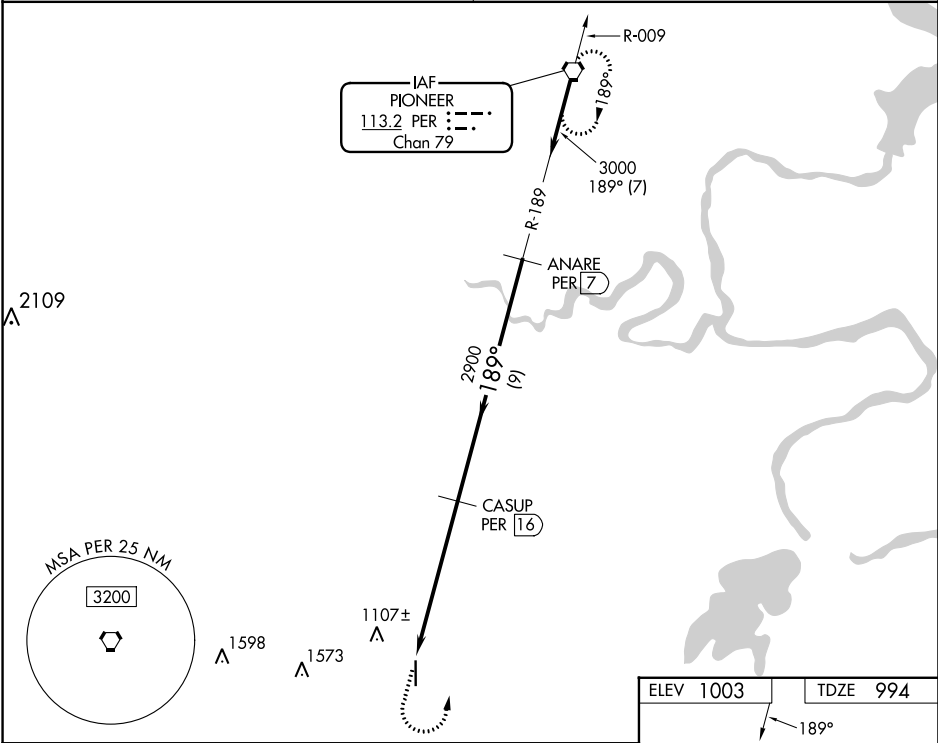

2000

↑

3000

↷

PER

⬡

CASUP

PER

16

ANARE

PER

7

PER

22

2900

189°

2.99°

TCH 40

6 NM

9 NM

3000

Procedure Turn NA

CATEGORY	A	B	C	D
S-17	1500-1 506 (500-1)	1500-1¼ 506 (500-1¼)	1500-1½ 506 (500-1½)	NA
CIRCLING	1500-1 497 (500-1)	1500-1¼ 497 (500-1¼)	1620-1¾ 617 (700-1¾)	NA

PONCA CITY ALTIMETER SETTING MINIMUMS

S-17	1560-1 566 (600-1)	1560-1¼ 566 (600-1¼)	1560-1⅝ 566 (600-1⅝)	NA
CIRCLING	1560-1 557 (600-1)	1560-1¼ 557 (600-1¼)	1680-2 677 (700-2)	NA

