


LOC I-HVD <u>111.9</u>	APP CRS 050°	Rwy Idg 11981 TDZE 815 Apt Elev 815
----------------------------------	------------------------	--

ILS or LOC RWY 5
FORT WAYNE INTL (FWA)

 For inop ALS, increase S-ILS 5 Cat E visibility to RVR 4000 and S-LOC 5 Cat C/D/E visibility to 1½ SM.  ASR	ALSF-2 	MISSED APPROACH: Climb to 1300 then climbing right turn to 3000 on FWA R-134 to OSBER INT/FWA 22 DME and hold.			
ATIS 121.25 360.825	FORT WAYNE APP CON 127.2 284.6	FORT WAYNE TOWER 119.1 269.325	GND CON 121.9 348.6	CLNC DEL 124.75	

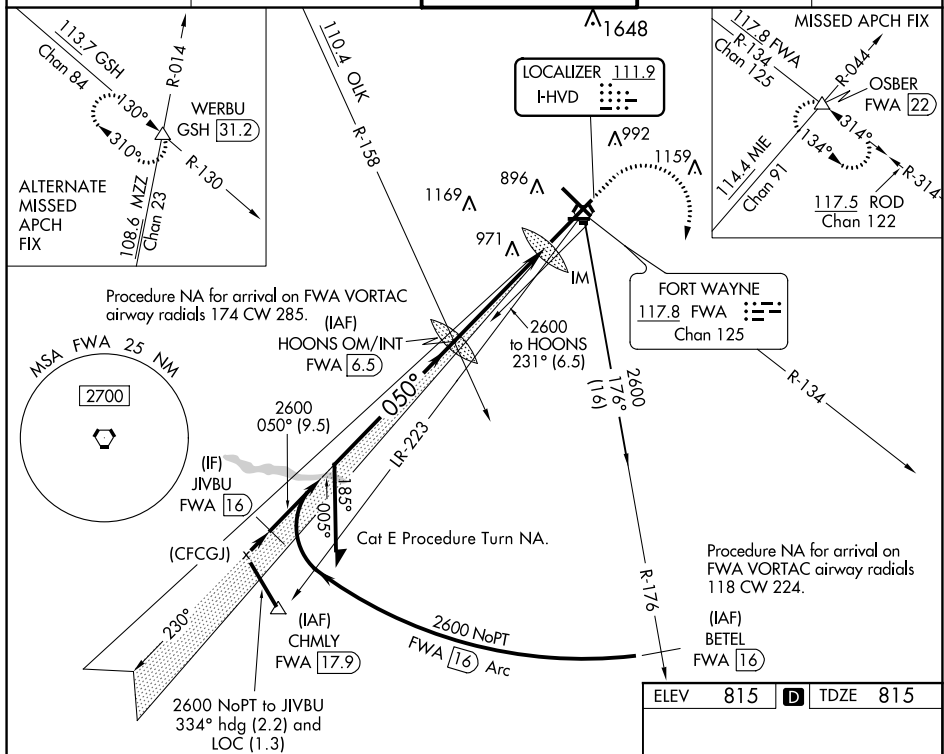

CATEGORY	A	B	C	D	E
S-ILS 5	1015/18 200 (200-½)				1015/24 200 (200-½)
S-LOC 5	1300/24	485 (500-½)	1300/50 485 (500-1)		
C CIRCLING	1300-1	485 (500-1)	1420-1¾ 605 (700-1¼)	1520-2¼ 705 (800-2¼)	1520-2½ 705 (800-2½)

