


ILS Z or LOC/DME Z RWY 13R

|                                                 |                                |                         |                                                                       |                                                                                               |                          |                          |             |
|-------------------------------------------------|--------------------------------|-------------------------|-----------------------------------------------------------------------|-----------------------------------------------------------------------------------------------|--------------------------|--------------------------|-------------|
| LOC/DME F-NQI<br><b>110.9</b><br>Chan <b>46</b> |                                | APCH CRS<br><b>130°</b> | Rwy Idg<br>TDZE<br>Arpt Elev<br><b>8000</b><br><b>50</b><br><b>50</b> | AL-918 [USN]                                                                                  |                          | KINGSVILLE NAS (KNQI)    |             |
| TACAN required.<br>▼                            |                                |                         |                                                                       | MISSED APPROACH: Climbing right turn to 3000 and intercept NQI TACAN R-184 to BRAMA and hold. |                          |                          |             |
| ATIS ★<br><b>282.25</b>                         | APP CON<br><b>119.9 290.45</b> |                         | TOWER ★<br><b>124.1 377.05</b>                                        |                                                                                               | GND CON<br><b>239.05</b> | CLNC DEL<br><b>328.4</b> | ASR/<br>PAR |

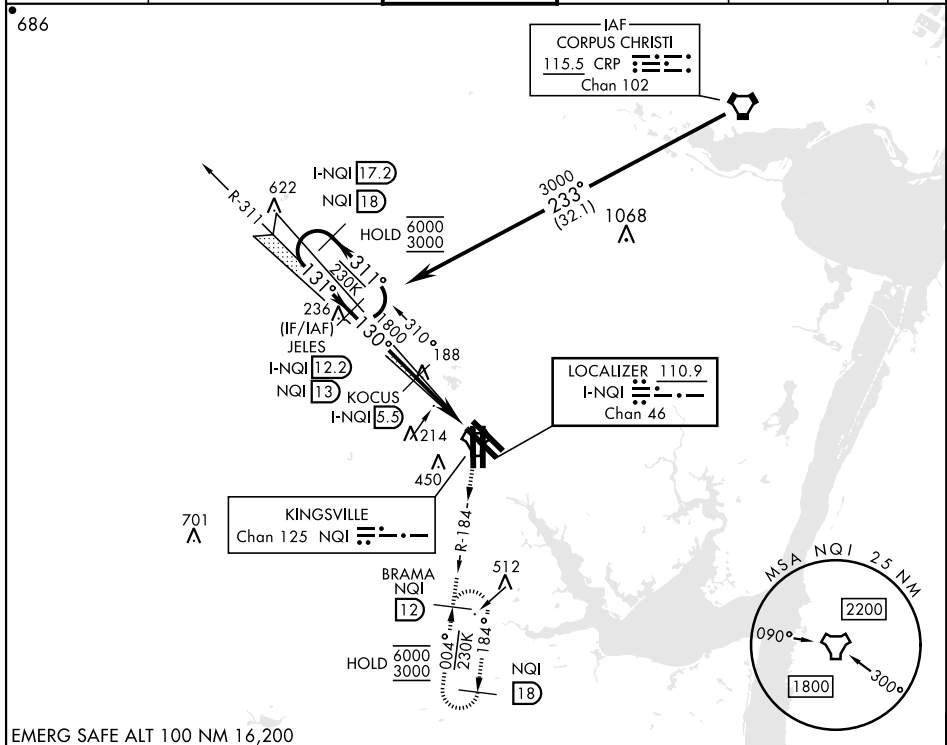

EMERG SAFE ALT 100 NM 16.200

