

LOC I-SBN	APP CRS	Rwy Idg	8412
109.3	274°	TDZE	774
		Apt Elev	798

ILS or LOC RWY 27L

SOUTH BEND INTL (SBN)

⚠

Circling Rwy 27R NA at night.


⚠

* RVR 1800 authorized with the use of FD or AP or HUD to DA.


MALSR

MISSED APPROACH: Climb to 1200 then climbing right turn to 2400 direct GJ VORTAC and hold.

ATIS	SOUTH BEND APP CON *	SOUTH BEND TOWER *	GND CON	CLNC DEL
120.675	118.55 257.8	135.675 (CTAF) 257.8	121.7	121.9

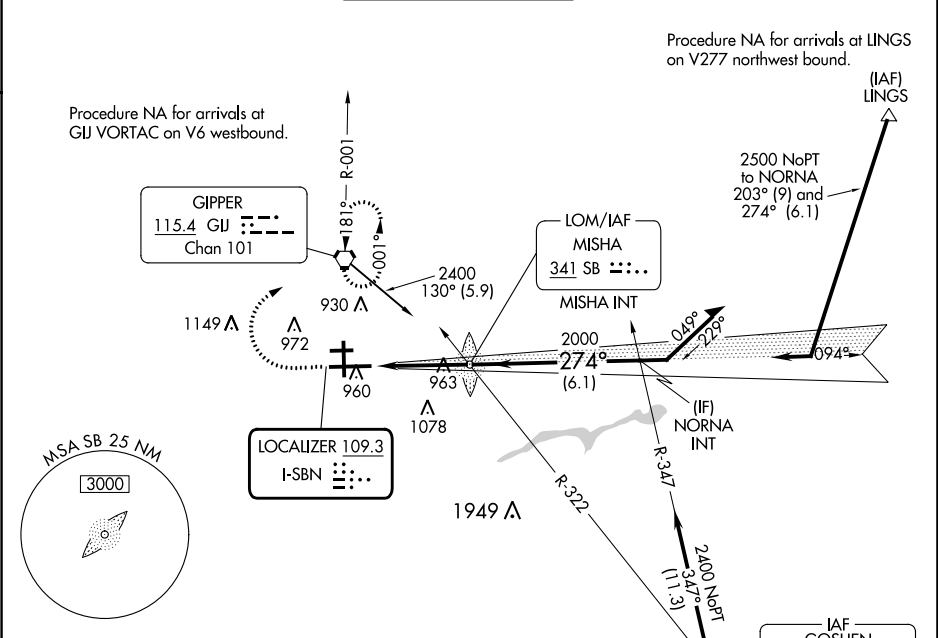

ELEV 798	TDZE 774
----------	----------

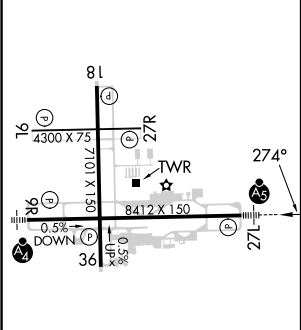

HIRL Rwy 9R-27L	1
MIRL Rwy 18-36	1
MIRL Rwy 9L-27R	
FAF to MAP 3.6 NM	
Knots	60 90 120 150 180
Min:Sec	3:36 2:24 1:48 1:26 1:12

113.7 GSH
Chan 84

Procedure NA for arrivals at GSH VORTAC
on V285 southwest bound.

1200

↑

2400

GJ

MISHA LOM/INT

1972

094°

Remain within 10 NM

NORNA INT

274°-2400

2400

2000

GS 3.00° TCH 53

3.6 NM

6.1 NM

CATEGORY	A	B	C	D
S-ILS 27L *	974/24 200 (200-½)			
S-LOC 27L	1220/24	446 (500-½)	1220/45	446 (500-¾)
CIRCLING	1280-1	482 (500-1)	1440-1¾ 642 (700-1¾)	1500-2¼ 702 (800-2¼)