

LOC/DME I-JRT 108.5 Chan 22	APP CRS 187°	Rwy Idg 11002 TDZE 21 Apt Elev 26
---	------------------------	--

ILS or LOC RWY 19R
TAMPA INTL (TPA)

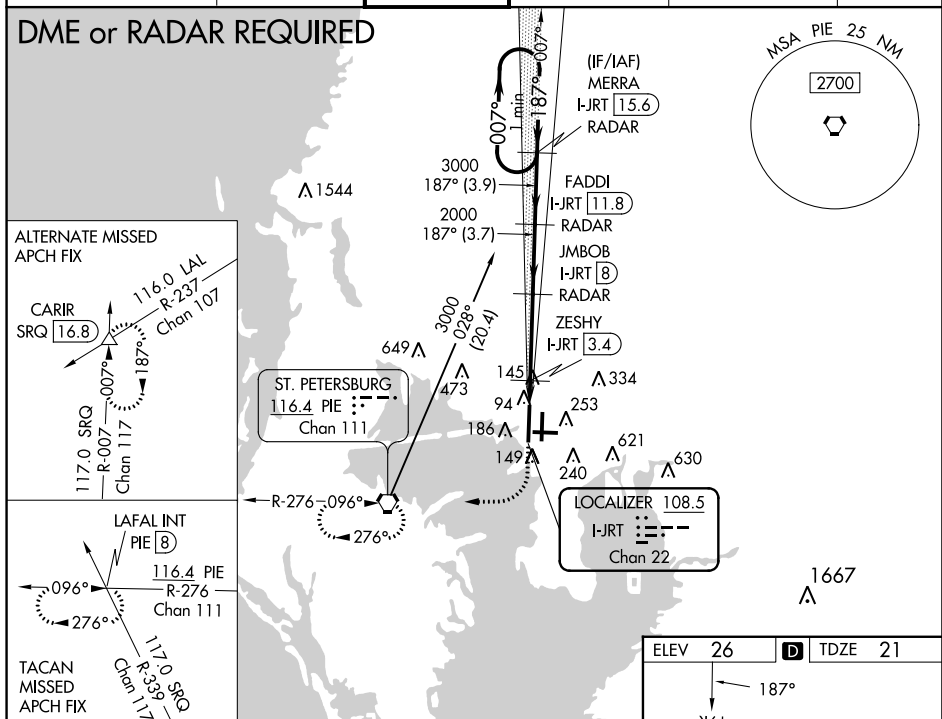
T DME required. Simultaneous approach authorized.
A For inop ALS, increase S-ILS 19R Cat E visibility to RVR 4000 and S-LOC 19R Cats C/D/E visibility to RVR 5500.
 #RVR 1800 authorized with use of FD or AP or HUD to DA



MISSED APPROACH: Climb to 500 then climbing right turn to 3000 direct PIE VORTAC and hold, continue climb-in-hold to 3000 (TACAN aircraft climb to 500 then climbing right turn to 4000 direct PIE VORTAC then on PIE VORTAC R-276 to LAFAI/PIE 8 DME and hold W. 096° inbound.)

ARR	D-ATIS	DEP	TAMPA APP CON	TAMPA TOWER	GND CON	CLNC DEL	CPDLC
126.45	128.475	118.5	307.175	119.5 269.4	121.7 269.4	133.6	

DME or RADAR REQUIRED

[illegible]