

LOC I-VPZ
109.7

APP CRS
272°

Rwy Idg
TDZE
Apt Elev
6500
770
770


ILS or LOC RWY 27
PORTER COUNTY RGNL (VPZ)

ADF required.
▼
▲ For inop ALS, increase S-LOC 27 Cats C and D visibility to 1 SM.


MALSR
▲

MISSED APPROACH: Climb to 1400, then climbing right turn to 2600 direct SEDLY LOM and hold, continue climb-in-hold to 2600.

ASOS 125.875	SOUTH BEND APP CON ★ 132.05 257.8	CLNC DEL 120.525	UNICOM 122.725 (CTAF) 0
------------------------	---	----------------------------	-----------------------------------

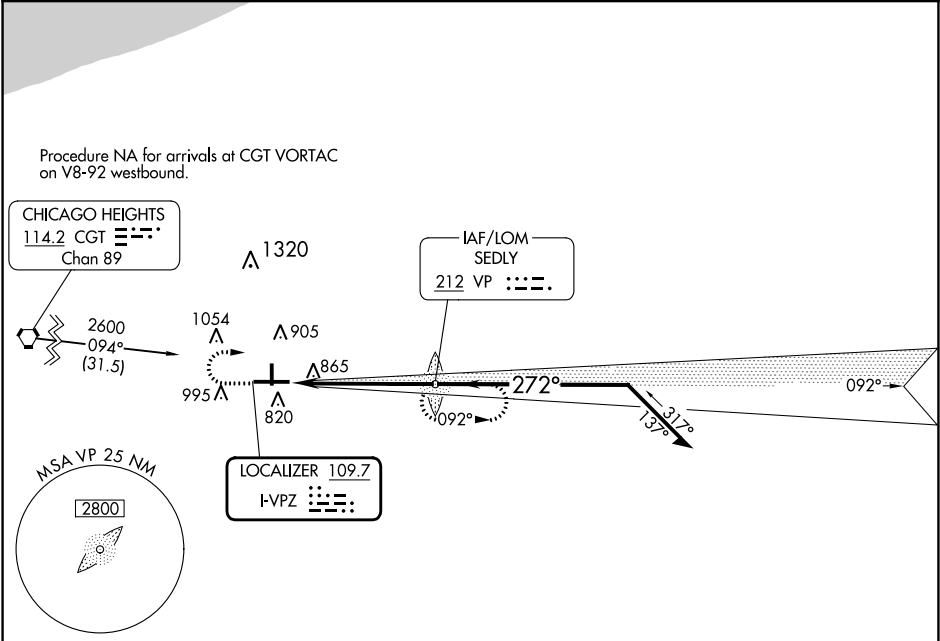

ELEV 770	D	TDZE 770
----------	---	----------

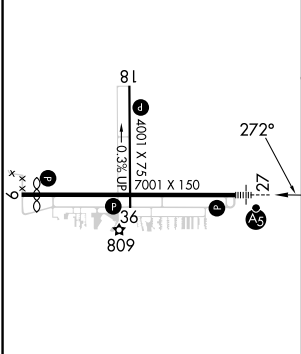

HIRL Rwy 9-27
MIRL Rwy 18-36
REIL Rwys 9, 18 and 36

FAF to MAP 5.3 NM

Knots	60	90	120	150	180
Min:Sec	5:18	3:32	2:39	2:07	1:46

